



User guide for JMicon 603 MP tool

Version B.2.11

CONFIDENTIAL



© Copyright JMicon Technology 2009.

All Rights Reserved.

Printed in Taiwan 2009

JMicon and the JMicon Logo are trademarks of JMicon Technology Corporation in Taiwan and/or other countries. Other company, product and service names may be trademarks or service marks of others.

All information contained in this document is subject to change without notice. The products described in this document are NOT intended for use implantation or other life supports application where malfunction may result in injury or death to persons. The information contained in this document does not affect or change JMicon's product specification or warranties. Nothing in this document shall operate as an express or implied license or environments, and is presented as an illustration. The results obtained in other operating environments may vary.

THE INFORMATION CONTAINED IN THIS DOCUMENT IS PROVIDED ON AN "AS IS" BASIS. In no event will JMicon be liable for damages arising directly or indirectly from any use of the information contained in this document.

JMicon Technology Corporation
1F, No.13, Innovation Road 1,
Science Based Industrial Park
Hsinchu, Taiwan, R.O.C

For more information on JMicon products, please visit the JMicon web site at
<http://www.JMicon.com> or send email to sales@jmicon.com



Table of Contents

1. Feature	4
2. Functions	5
3. Notice:	7
4. Login Unit Number(LUN):	8
5. Error code:	9
6. INI file definition:	10
7. Illustrations:	14
8. Log File:	19
9. History:	22

CONFIDENTIAL



1. Feature

- Integrate download firmware & read/write testing.
- Concurrent multi-port process.
- Jumperless setting.
- Provide windows user interface and easy to use.
- Auto-selection of system file.
- Auto detect the configuration of flash array and update to INI file.
- Use one button to complete the preformat, download system firmware and read/write test.
- Interface: Data access through USB or USB to SATA Bridge (JM20329) or USB to PATA Bridge (JM20335).
- Input device information such as serial number, model name...etc.
- Read/write defect table.
- Error proof mechanism.

CONFIDENTIAL



2. Functions

2-1. Test item: can select partial test items to do.

2-2. Flash info: disk media setting include flash maker, type, bank number...etc

2-3. Device setting: Input serial number, model name, f/w version, VID/PID...etc.

2-4. F/W setting: Show firmware setting.

2-5. RD: can get special information to analyze.

2-6. H/W setting:

2-1. Test item

- Check Flash Module
- ~~sata interface test.~~
- Flash interface test.
- Pre-format.
- Download program.
- Check Tables
- Read/write test
-

2-2. Flash setting

- Flash maker.
- Flash type.
- Bank number.
- Channel number.
- Select specified firmware.
- Set drive current
- IDEMA capacity setting (see more detail in http://idema.org/_smartsite/modules/local/data_file/show_file.php?cmd=download&data_file_id=1066)

2-3. Device setting

- Input serial number, model name, f/w version, VID/PID...etc.

2-4. FW setting

- Later to early: add early bad blocks to early bad blocks when create defect table.



- Erase rebuild early bad : Use the erase method to rebuild early bad blocks.
- Repair used module : Preformat the module with new flash and used flash.

2-5. RD

- Get defect table from flash.
- Put defect table to flash.
- Rebuild bad block mark

2-6. H/W setup

- Via JMF329 USB to SATA bridge board (PCB No. JM329-DB-001-0) to do all test.



USB to SATA bridge board ↑



Bridge board connect to device ↑




3. Notice:

- On EV board, you can always set GPIO5=0 (flash download) to download and test. But when the downloaded firmware is invalid and can't accept ATA vendor command 0xC1(Jump to loader), you may cause system fail. If you want to download f/w again, you have to set GPIO5=1 (host download) to download a valid firmware.
- Flash test may destroy system blocks existed in flash. Don't use MPTool to test flash only.
- When MPVersion = 0 in INI file, user can modify test setting
- When MPVersion = 1 in INI file, only <Start> <Refresh> <Close> button can be pressed. If you want to unlock the limit, first set on <RDVersion> checkbox and set password "jmicron", then you can select any button.
- If any fail has caused, you can double click the fail line to get error message.
- "Connect check" combo box provide user to check if the number of detected devices do not match the input value.
- "Red circle button" is used to automatically detect and update flash settings on factory mode. The password is "jmicron". If this process is successful, the button will turn to green.
- You can set USB device to removable media device from [UsbRemovable]=1 of INI file.
- If your device is USB, SATA combo device, please turn on IDEMA.



4. Login Unit Number(LUN):

- In computer storage, a logical unit number or LUN is simply the number assigned to a logical unit. A logical unit is a SCSI protocol entity, the only one which may be addressed by the actual input/output (I/O) operations. Each SCSI target provides one or more logical units, and does not perform I/O as itself, but only on behalf of a specific logical unit.(From Wiki)
- Users can access 4 LUNs in JM603 for maximum limitation, and the 4 are individually named as: AP LUN, Security LUN, Public/CDROM LUN and Hidden LUN.
- **AP LUN** : AP LUN is a normal LUN that can be accessed normally by host. But if you set "read only" feature to the LUN when initializing it, then it will be read only.
- **Security LUN** : Security LUN is protected and you need password to unlock it. When Security LUN unlocked, you can access Security LUN but can not access AP LUN. The below picture shows the relationship between AP and Security LUN.

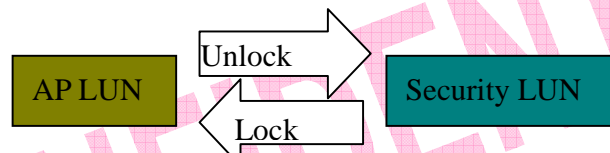

- **Public/CDROM LUN** : Public/CDROM LUN use the same LUN slot. If you enable the CDROM feature when initializing, the LUN will be set to CDROM LUN. Or it will be Public LUN.
- **Hidden LUN** : Hidden LUN is a special LUN. It is not visible or can not be accessed as other LUNs. You must use vendor command to access it.



5. Error code:

Test item	Error code	Description
Check flash module fail	M00	flash chip, ch, bank, don't match setting
Sata interface test	A00	Read/Write fail
Flash interface test	B00	
Flash RESET fail	B01	"Reset" flash
ReadFlashID fail	B02	Read ID of flash
2nd ReadFlashID fail	B03	Read ID of flash
Flash Erase fail	B04	"Erase" Flash
Flash Program fail	B05	"Program" flash when turn on ECC
Flash Program fail(ECC OFF)	B06	"Program" flash when turn off ECC
Flash ECC fail	B07	
Flash redundancy area test fail	B08	
Flash 2nd Erase fail	B09	"Erase" Flash
Test Memory Fail	B10	Read/Write SRAM
ECC Test fail	B11	
Pre-format	C00	
Table not exist	C01	code block rage, defect table don't exist in flash
Table ecc fail	C02	data of code block rage, defect table are wrong
Number of bad block is over defect ratio	C03	number of bad block in too much on per chip
Number of free block is too large	C04	number of reserved block is too much
Total bad block number (%d) is over (MaxFreeBlcokNum-25)	C05	number of bad block in too much on total system
Build Table Fail	C06	building system table for SSD fail
Write Backup tables Fail	C07	Write remap and defect backup fail.
Check Tables Fail(Ecc error)	C08	Check remap and defect table ecc fail.
Download program	D00	
Check Tables Fail	J00	Check defect table data fail.
Read/write test	E00	LBA read/ write fail
Time Out	T00	Time Out



6. INI file definition:

	Type	Description
[Setting]		
ProductModel	String	Show the product model. Default value "JM" will hide.
MPVersion	0/1	'1' for Factory MP, 0 for RD setting.
ShowTitle	0/1	
TimeOut	Dec	Value of time out(Unit: Min)
EnBarCode	0/1	Enable barcode input
ConnectDevNum	0~12	Check the number of connect device, 0:don't care
StyleFile	String	The layout of usb port.
[TestItems]		
EnFlashModule	0/1	Enable flash module test
EnSataTest	0/1	Enable Sata Test
EnFlashTest	0/1	Enable flash Test
EnPreFormat	0/1	Enable pre-format process
EnDownload	0/1	Enable download code process
EnCheckTables	0/1	Enable check tables
DownloadType	0/1	Download SATA /USB code (SATA: bit0,USB:bit1)
EnRWTest	0/1	Enable read/write test
EnFormat	0/1	Enable format process
DiskFormat	0/1	Format file system type select (FAT32: 0)
DiskLabel	String	Disk volume label assign (FAT32 at most 11 characters)
SaveDefTable=0	0/1	Save Def. Table
[DeviceSetting]		
ModelNum	String	SATA identify model number
FirmwareVer	String	SATA identify firmware version
SerialNum	String	SATA identify/USB serial number
SNAutoInc	0/1	Serial number auto increase
SNDecimal	0/1	Serial number use hexadecimal(0)/decimal(1)



User guide for JMicron 603 MP tool

SNErrReuse	0/1	Reuse serial number of error device. (0: assign new SN for each device. 1: use last fail device's SN if had.)
VendorName	String	USB vendor name
ProductName	String	USB product name
VID=152D	String	USB VID
PID=0602	String	USB PID
ManufString	String	USB manufacture string
ProductString	String	USB product string
IDE_UDMA5	0/1	Cable type report on IDE bus. 0:UDMA2, 1:UMDA5
[FlashSetting]		
Capacity	Dec.	Flash capacity check (2 ⁿ Gbytes)
FlashName	String	Stored flash name selection
Channel	Dec.	Stored channel selection
Bank	Dec.	Stored bank selection
DrvCurrent=0	Dec.	Store drive current selection
ExtFlashFile=flash.ini	String	Flash attributes setting file (Must have)
[FwSetting]		
DefPercentage	Dec.	Defect block ratio
ResPercentage	Dec.	Reserve block ratio
Bch8ReadErrorThreshold	Dec.	Mark block as defect when ECC fail bits over/equal the threshold in BCH 8
Bch15ReadErrorThreshold	Dec.	Mark block as defect when ECC fail bits over/equal the threshold in BCH 15
Bch8EccErrorCopyThreshold	Dec.	Copy data to good block when ECC fail bits over/equal the threshold in BCH 8
Bch15EccErrorCopyThreshold	Dec.	Copy data to good block when ECC fail bits over/equal the threshold in BCH 15
WearLevelFrequency	Dec.	Difference of average and max erase count is the value x2
SmartEnable	0/1	Enable SMART feature
SecurityEnable	0/1	Enable security feature



User guide for JMicron 603 MP tool

SlumberEnable	0/1	Enable slumber feature
InterleaveEnable	0/1	Enable interleave feature
ScrambleEnable	0/1	Enable scramble feature (Internal mechanism)
RemapEnable	0/1	Enable remap feature (Internal mechanism)
ParallelMemEnable	0/1	Enable parallel memory feature (Internal mechanism)
SecurityEraseEnable	0/1	Erase all addressable data when GPIO 1 = 0
UsbRemovable	0/1	1=Set USB device to removable media device.
UsbLedP14	0/1	1=set GPIO#14 as USB LED, 0=set HDDA as USB LED.
SecurityCounter	Dec	Security counter (default is 5)
IDEMA_Capacity_Enable	0/1	Enable IDEMA capacity
IDEMA_Capacity	Dec	Value of IDEMA capacity
[ProtRemap]		
RemapPortEnable	0/1	Enable remapping port.(0:disable, 1:enable)
SmartRemapEnable	0/1	Enable Smart remapping port. (0:disable, 1:enable)
[Lun]		
APLunPartition	0/1	Enable AP Lun(always is 1)
APLunPartitionReadOnly	0/1	1= Set AP Lun to read only.
APLunPartitionSize	Dec	AP Lun's size
APLunPartitionVolume	String	AP Lun's volume label
SecurityLunPartition	0/1	Enable Security Lun(0:disable, 1:enable)
SecurityLunPartitionSize	Dec	Security Lun's size.
SecurityLunPartitionVolume	String	Security Lun's volume label
SecurityLunPartitionPassword	String	Security Lun's password
SecurityLunPartitionHint	String	Security Lun's hint
PublicLunPartition	0/1	Enable (Public/CDROM) Lun(0:disable, 1:enable)
PublicLunPartitionReadOnly	0/1	1 = Set Public Lun to read only
PublicLunPartitionCDROM	0/1	1 = Set Public Lun to CDROM Lun



User guide for JMicron 603 MP tool

PublicLunPartitionSize	Dec	(Public/CDROM) Lun's size.
PublicLunPartitionVolume	String	Public Lun's volume label.
PublicLunPartitionCDROMImage	String	CDROM Lun's CD image.
HiddenLunPartition	0/1	Enable Hidden Lun(0:disable, 1:enable)
HiddenLunPartitionSize	Dec	Hidden Lun's size.
HiddenLunPartitionVolume	String	Hidden Lun's volume label
[RDSetting]		
TableIn	String	Defect table save to
TableOut	String	Defect table write from

CONFIDENTIAL




7. Illustrations:

- Test items

You can select partial test items to execute.

Current selected configuration file name

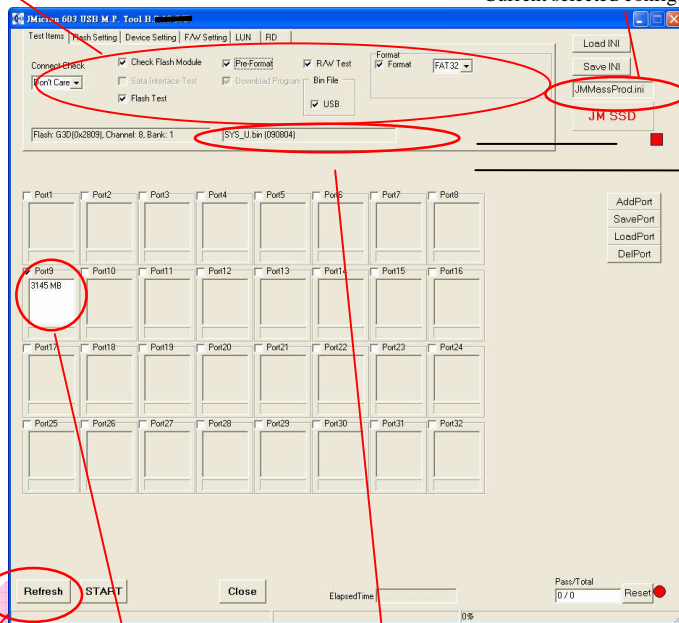

Double click this line to get original firmware version.

Download file name (USB file) & version

Identify tested device.

- Flash setting




User guide for JMicron 603 MP tool

Select correct flash setting

Select correct capacity depended on flash setting.
If you don't want to check it, select "don't care" item.

IO drive current setting


Auto detects flash array configuration.

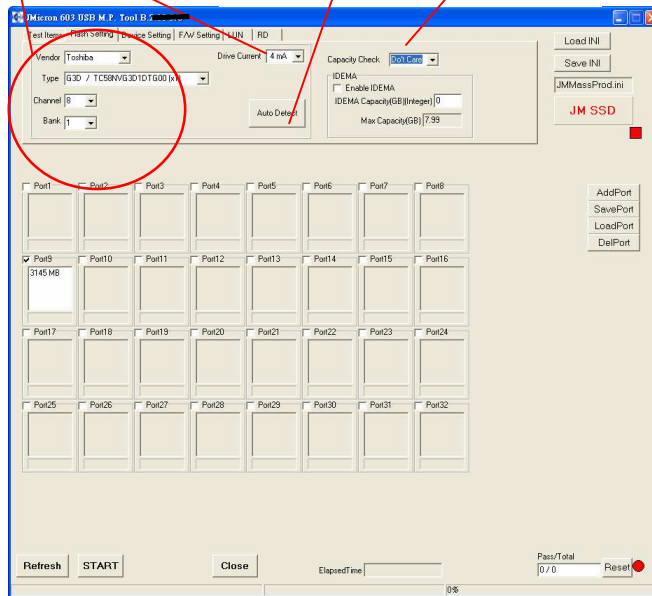

● Device setting

Serial Number for USB device

USB device info

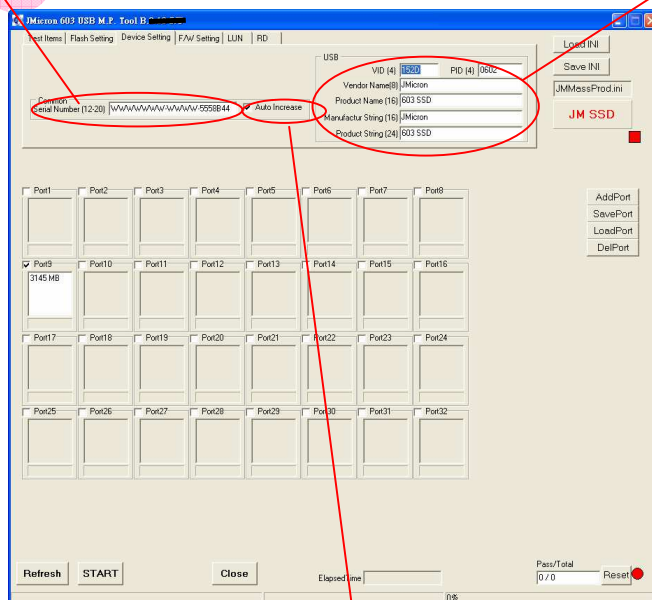

Automatic increase serial number


● F/W setting



See section 2-5.

These setting don't save to INI file when close application.


Refer to .INI definition.

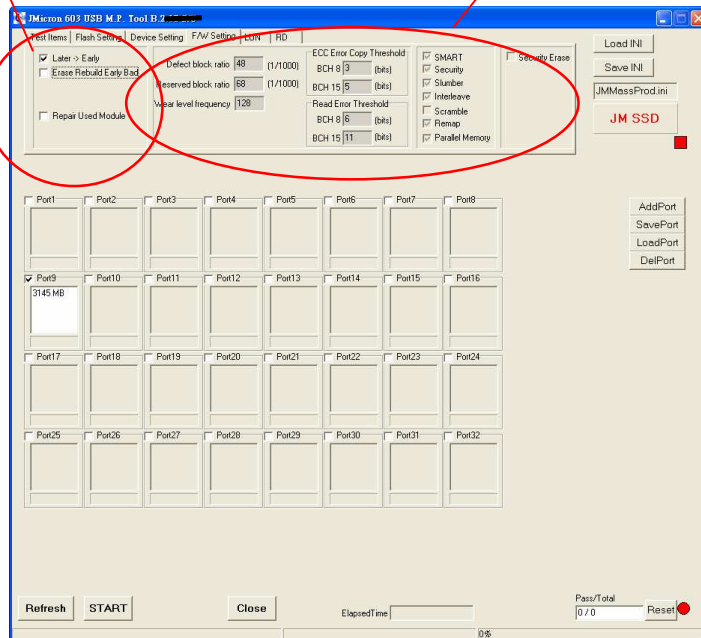

- LUN setting




Lun setting

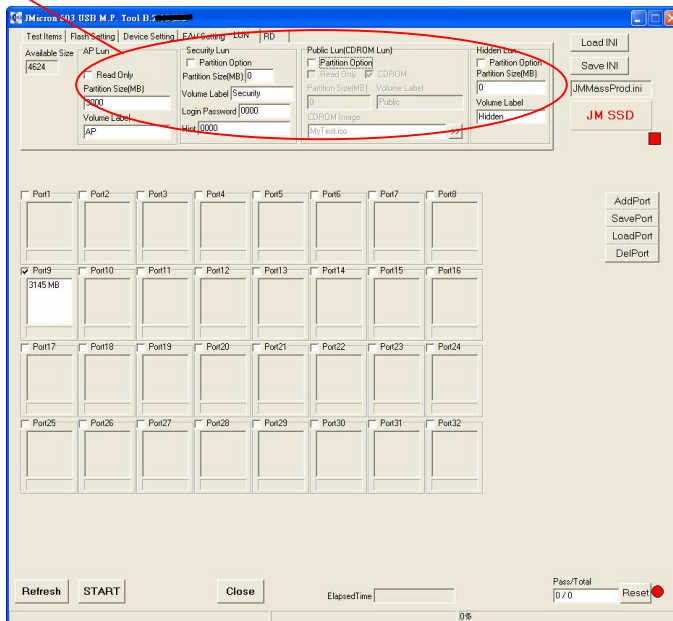

• RD setting

Read/write defect table

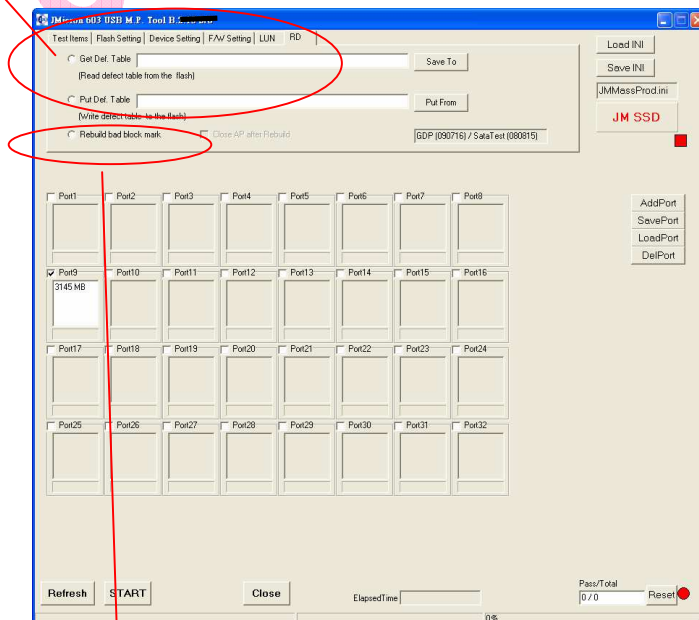


Rebuild flash map with bad block mark for defect table creation.



- Get error message

Double click this line to get the detailed message

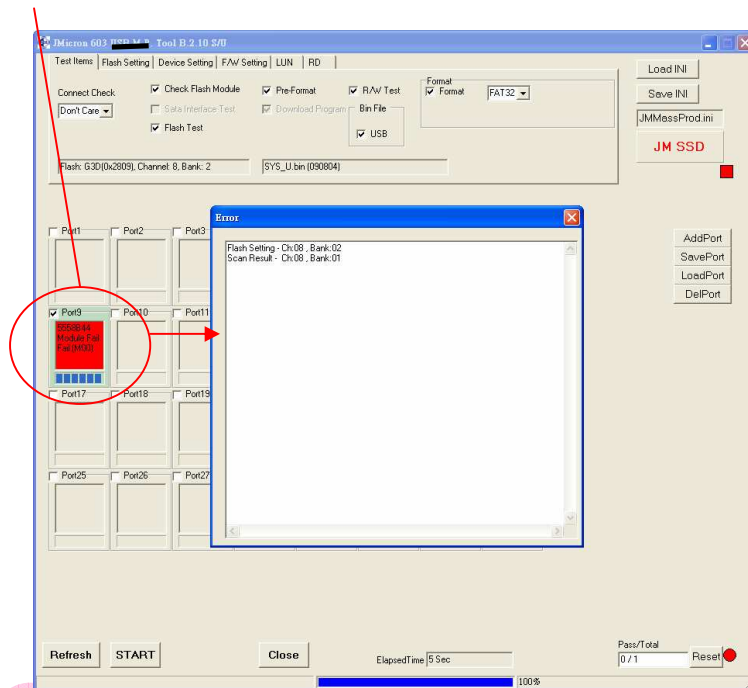



8. Log File:


The MP will generate some log files under the “log” directory.

- 7.1 Daily log(filename like as YYYYMMDD_XXX.txt)

Y:Year, M:Month, D:Day X:count


No.	Port.	Date	Time	SerialNumber	Module	SATA	Flash	P_F	Down	R/W	Format	Result
000001	000001	2008/12/12	09:13:16	WWWWWW-WWW-7777A46	Pass	Pass	----	----	----	Pass	Pass	Pass
000001	000001	2008/12/12	09:58:37	WWWWWW-WWW-7777A46	Pass	Pass	----	----	Pass	----	----	Pass

- 7.2 Summary log(filename JMSSD.log)

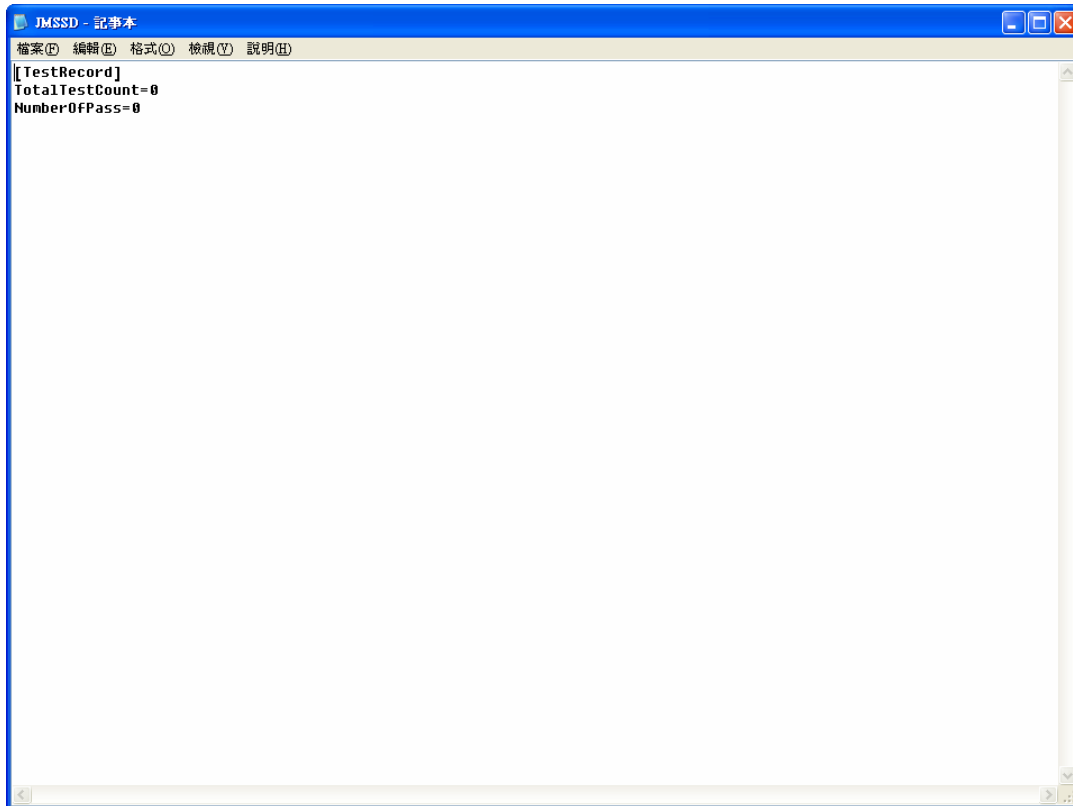

- 7.3 Error log(filename like as Error_YYYYMMDDHHM1M1_port.txt)

Y: Year, M: Month, D: Day H: Hour M1: Minute Port: Usb port number

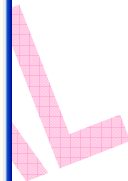



9. History:

Version	Date	Firmware version	Remark
B.2.6	09/03/31	090331	1. show more information of usb device (such as VID, PID,...)
B.2.9	09/05/08	090508	1. skip some flash check
B.2.10	09/08/04	090804	1.show more detail when R/W fail. 2.Add LUN feature.
B.2.11	09/08/17	090817	1.Add check table function. 2.support CDROM image on MAC.

CONFIDENTIAL